


JOPRO Cart

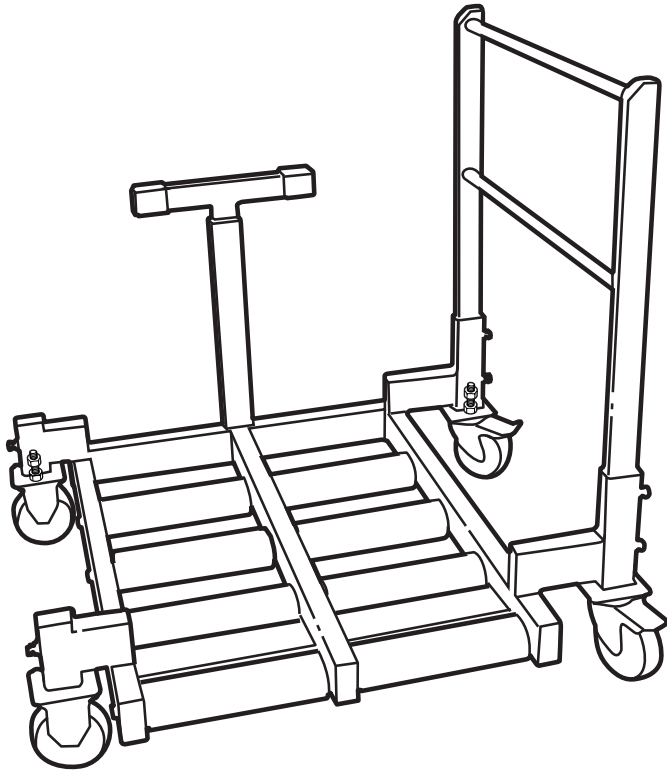

JOPRO Cart

Manual battery handling system with two battery compartments.

For sideways battery change on forklift trucks.

Maximum battery weight: 400 kg per battery.

Please read the manual carefully before use and keep it in a safe place for future reference.

The information in this manual was up to date when it was printed.


JOPRO reserves the right to make technical changes without prior notice.

© 2016 JOPRO AB


Table of contents

Overview.....	4
User's Guide.....	6
Maintenance.....	8
Spare Parts.....	10

Overview

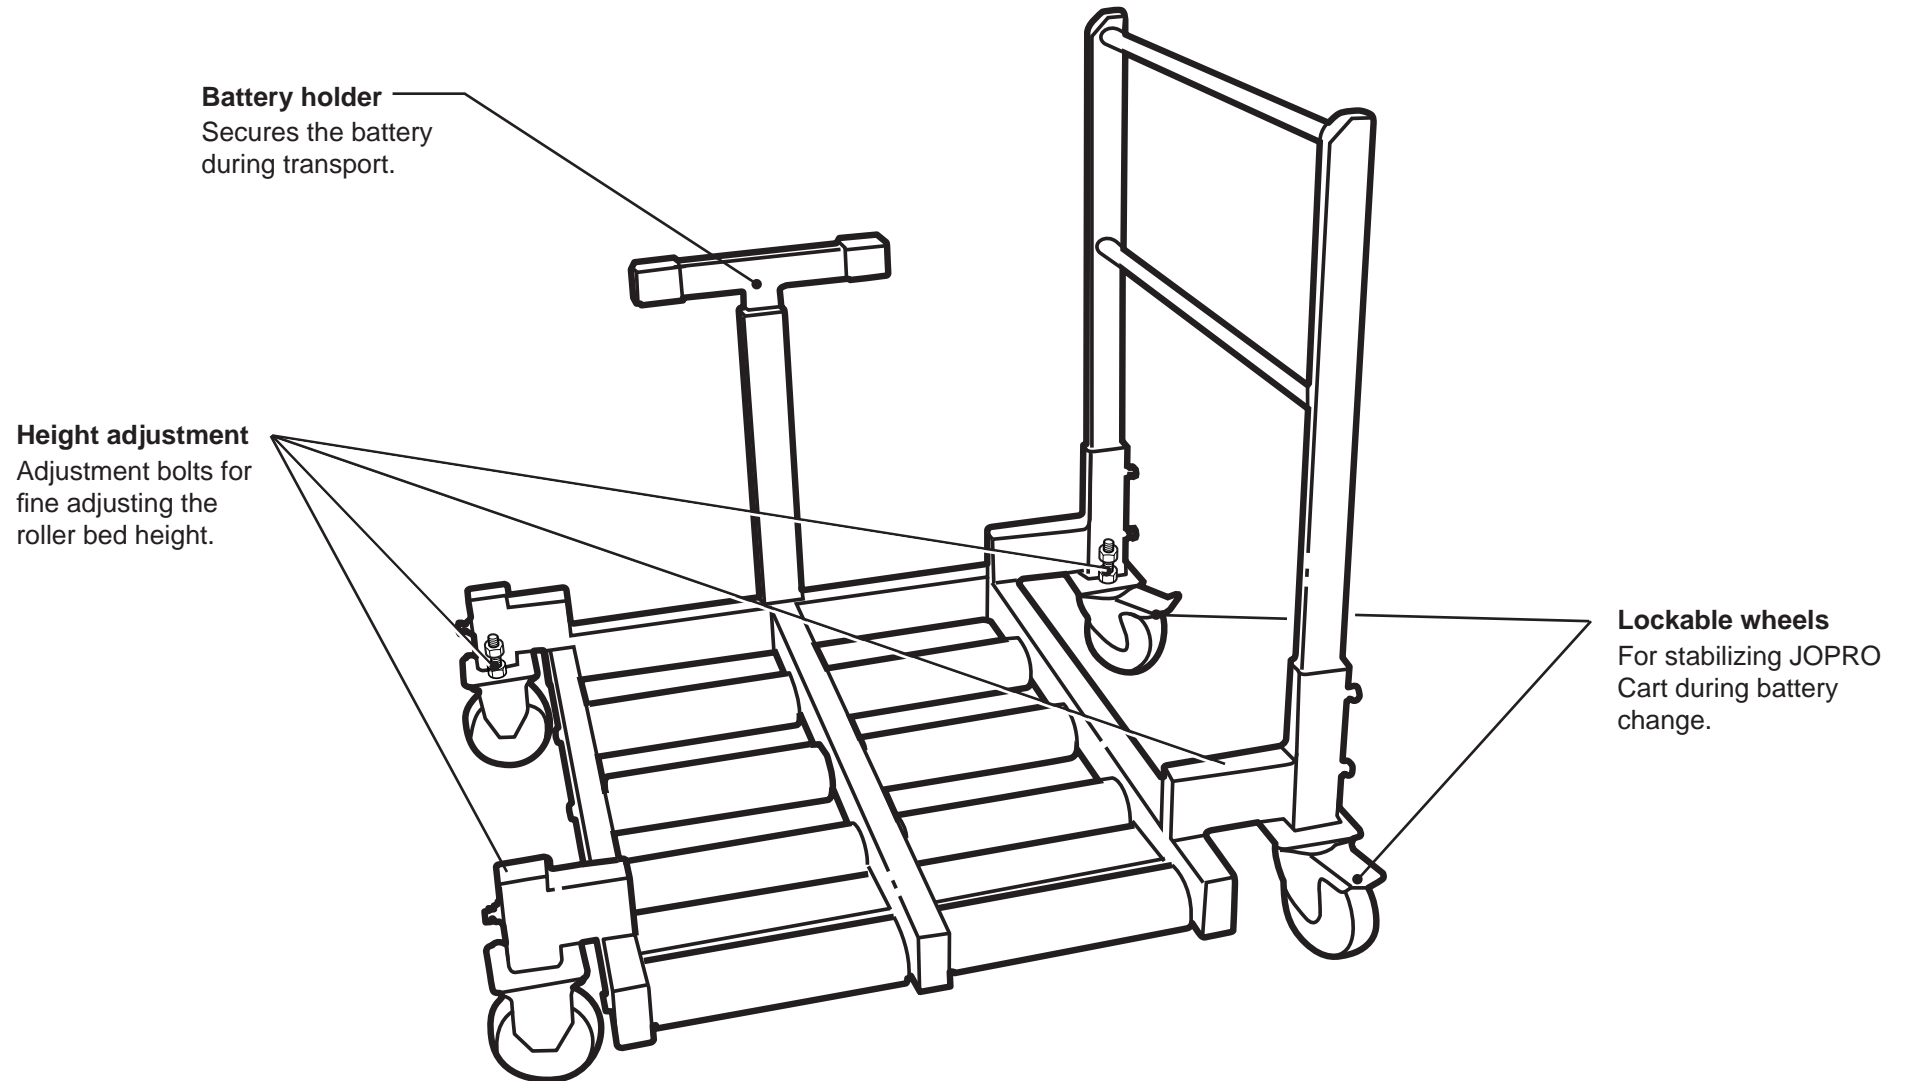


User's Guide

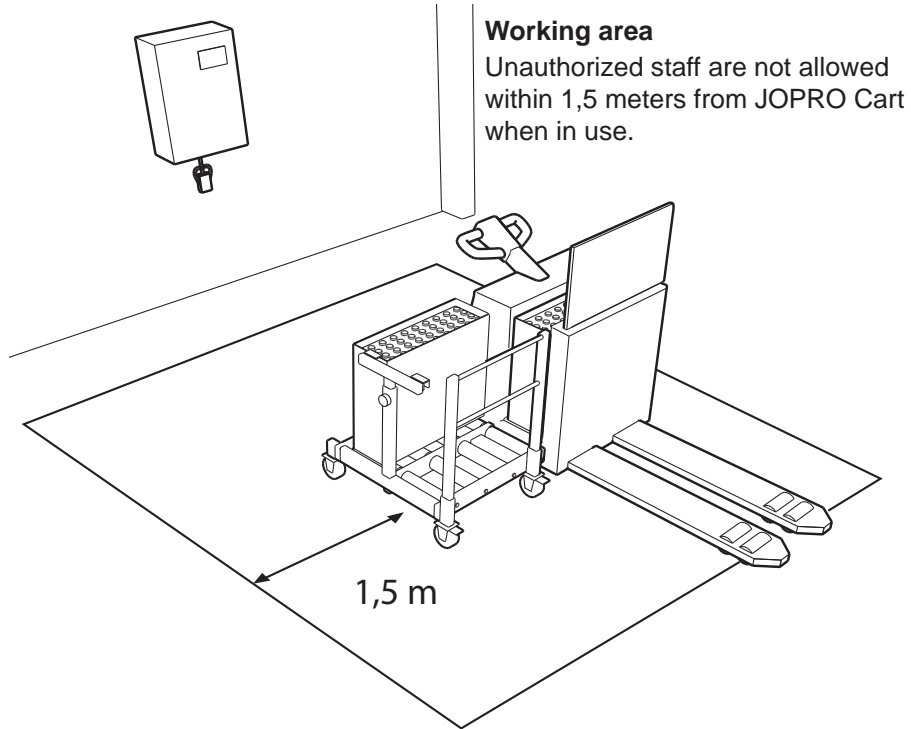


Always lock the rearmost wheels before any battery is pulled on or off JOPRO Cart.

Always lock the battery holder over the battery tray before transport.

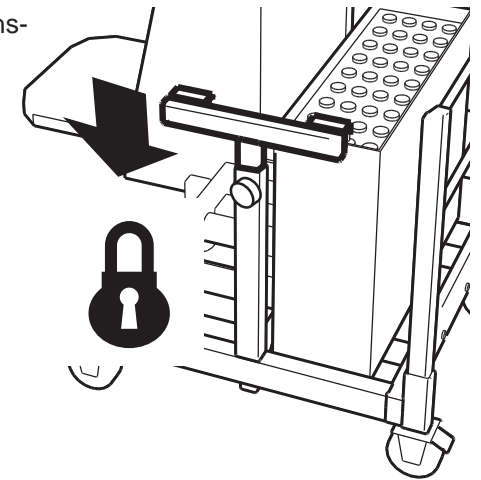

Mind your fingers when pulling the battery in or out of the forklift.

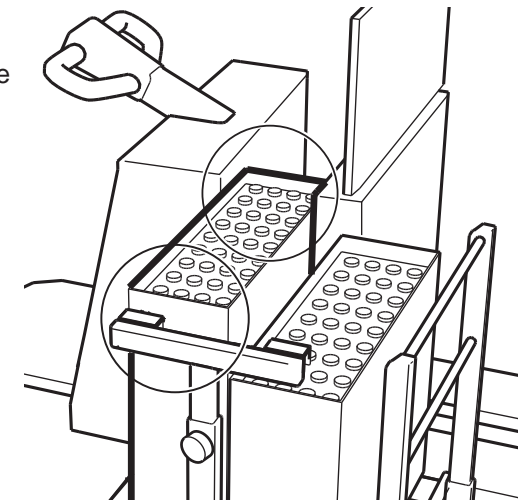

Maintenance

Monthly

JOPRO Cart should be supervised regarding:

- *deformations*: check that there are no visible cracks, distortions, corrosions or other deformations.


- *weldings*: check that all weldings are intact and have no visible cracks.

- *instructions*: check that the manual is always available.

When required

JOPRO Cart and the forklift's rollers must be on the same level.


Adjust the height of JOPRO Cart by means of the adjustment bolts

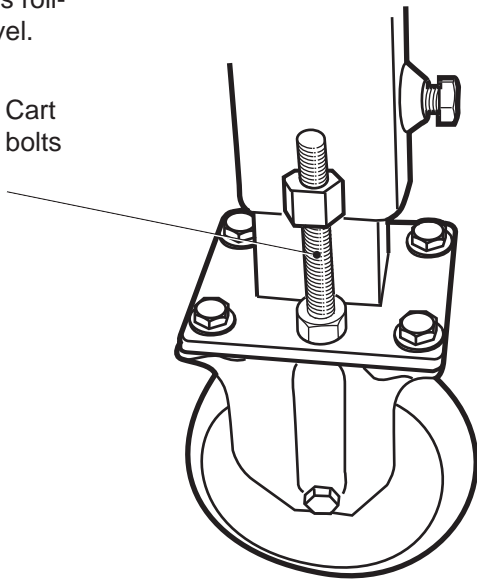



Spare Parts JOPRO Cart




030-0101

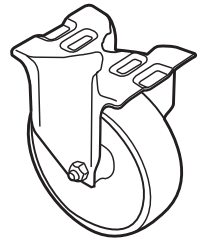

040-0101

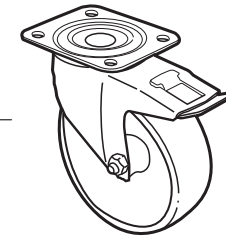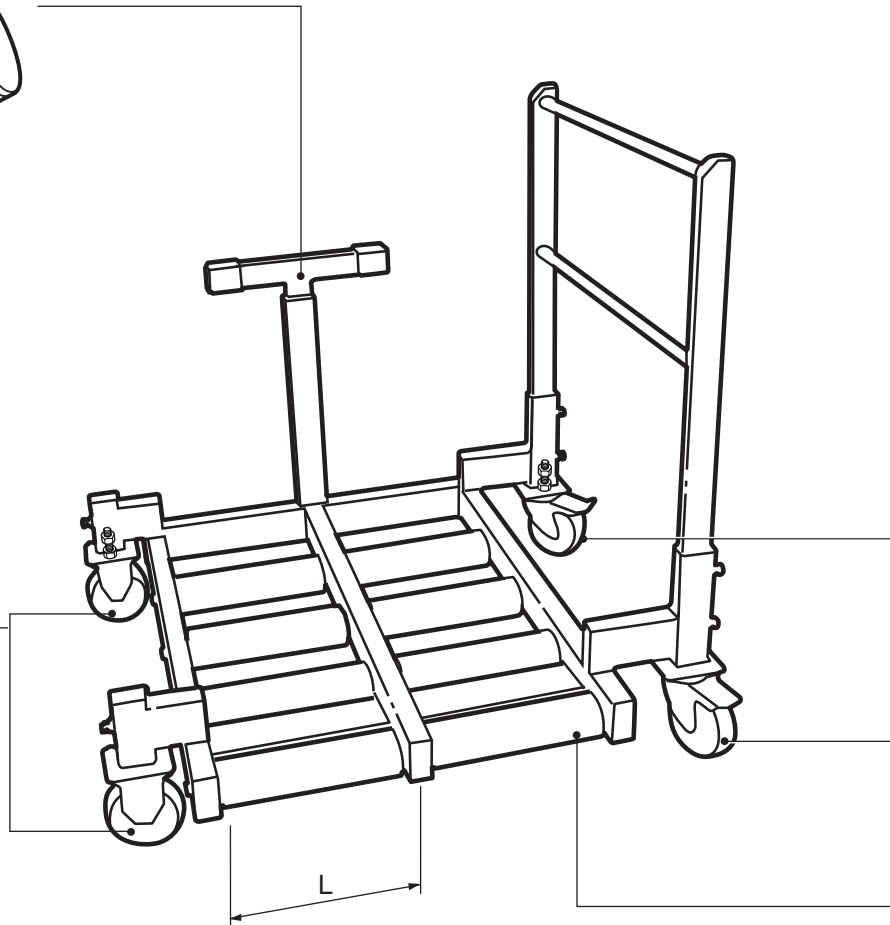

040-0201

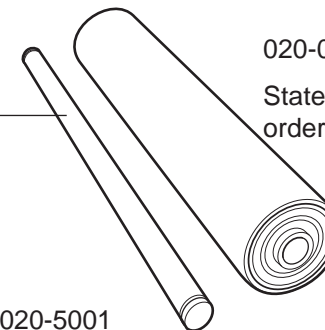

020-0101

State L together with the order number

020-5001

State L together with the order number



Jopro AB
Lunnavägen 6
SE-449 50 Alafors

Tel: +46-303-749740
Fax: +46-303-748206

info@jopro.se
www.jopro.se